



## testo 400 - Universal IAQ instrument

### Short instructions



# Contents

|           |                                                                                                                                    |           |
|-----------|------------------------------------------------------------------------------------------------------------------------------------|-----------|
| <b>1</b>  | <b>About this document .....</b>                                                                                                   | <b>3</b>  |
| <b>2</b>  | <b>Safety and disposal.....</b>                                                                                                    | <b>3</b>  |
| <b>3</b>  | <b>Product-specific safety instructions .....</b>                                                                                  | <b>3</b>  |
| <b>4</b>  | <b>Data protection .....</b>                                                                                                       | <b>4</b>  |
| <b>5</b>  | <b>Use.....</b>                                                                                                                    | <b>4</b>  |
| <b>6</b>  | <b>Product description .....</b>                                                                                                   | <b>5</b>  |
| 6.1       | Front view .....                                                                                                                   | 5         |
| 6.2       | Rear view .....                                                                                                                    | 6         |
| 6.3       | Probe connections .....                                                                                                            | 6         |
| <b>7</b>  | <b>Commissioning .....</b>                                                                                                         | <b>7</b>  |
| 7.1       | Mains unit/energy storage unit.....                                                                                                | 7         |
| 7.2       | Switching the testo 400 on and off .....                                                                                           | 7         |
| 7.3       | Display – user interface .....                                                                                                     | 8         |
| <b>8</b>  | <b>Using the product.....</b>                                                                                                      | <b>10</b> |
| 8.1       | Overview of main menu (  ).....                   | 10        |
| 8.2       | Overview of measurement types (  ).....           | 12        |
| 8.3       | Overview – editing the reading display (  ) ..... | 13        |
| 8.4       | Getting the readings in 5 steps .....                                                                                              | 14        |
| <b>9</b>  | <b>Software .....</b>                                                                                                              | <b>16</b> |
| 9.1       | Purpose .....                                                                                                                      | 16        |
| 9.2       | System requirements.....                                                                                                           | 16        |
| 9.3       | First steps.....                                                                                                                   | 17        |
| 9.3.1     | Installing the software/driver.....                                                                                                | 17        |
| 9.3.2     | Launching testo DataControl .....                                                                                                  | 17        |
| 9.4       | Using the product .....                                                                                                            | 18        |
| 9.4.1     | Overview.....                                                                                                                      | 18        |
| 9.4.2     | Synchronizing data.....                                                                                                            | 18        |
| <b>10</b> | <b>Technical data .....</b>                                                                                                        | <b>19</b> |
| 10.1      | Product-specific approvals.....                                                                                                    | 20        |
| 10.2      | Contact and support .....                                                                                                          | 20        |

# 1 About this document

- The instruction manual is an integral part of the instrument.
- Keep this documentation to hand so that you can refer to it when necessary.
- Please read this instruction manual through carefully and familiarize yourself with the product before putting it to use.
- Hand this instruction manual on to any subsequent users of the product.
- Pay particular attention to the safety instructions and warning advice in order to prevent injury and damage to the product.



You will also find further information about your testo 400 universal IAQ instrument in the online instruction manual on the Testo website, [www.testo.com](http://www.testo.com), under the product-specific download.

---

## 2 Safety and disposal

Take the **testo information** document into account (accompanies the product).

## 3 Product-specific safety instructions

### **DANGER**

#### **Integrated magnet**

#### **Danger to life for persons with pacemakers!**

- Keep a distance of at least 20 cm between your pacemaker and the measuring instrument.

---

### **ATTENTION**

#### **Integrated magnet**

#### **Damage to other devices!**

- Keep a safe distance from devices that may be damaged by magnetism (e.g. monitors, computers, credit cards, memory cards, etc.).
-

# 4 Data protection

The testo 400 measuring instrument makes it possible to input and store personal data such as name, company, customer number, address, telephone number, e-mail address and website.

Please be aware that your use of the functions offered here is entirely your own responsibility. This applies in particular to use of the interactive functions (e.g. storing customer data or sharing readings). You are responsible for compliance with the data protection regulations and laws applicable in your country.

Therefore it is your responsibility to ensure the legality of the processing of personal data for which you are responsible.

The personal data collected with the measuring instrument is never automatically transferred to Testo SE & Co. KGaA.

# 5 Use

The testo 400 is an instrument for measuring climate-related parameters. The testo 400 is particularly suitable for carrying out comfort level measurements for workplace evaluation and flow measurements in and on air conditioning systems.



The instrument is only to be used by qualified expert personnel. The product must not be used in potentially explosive atmospheres!

---

## 6 Product description

### 6.1 Front view



6.2 Rear view



The image shows the rear view of a rugged handheld device. Callout 1 points to a camera lens at the top. Callout 2 points to two small ports for differential pressure measurement. Callout 3 points to two circular magnets on the left side. Callout 4 points to a strap attachment point at the bottom right. Callout 5 points to a USB port on the left side.

|   |                           |   |                                                             |
|---|---------------------------|---|-------------------------------------------------------------|
| 1 | Camera                    | 2 | Differential pressure measurement connections (+/- marking) |
| 3 | Magnets                   | 4 | Attachment point for carrying strap                         |
| 5 | USB port/mains connection |   |                                                             |

**⚠ CAUTION**

**Make sure the pressure tube does not jump away from the connection socket.**

**Risk of injury!**

- Ensure correct connection.

6.3 Probe connections



The image is a close-up of the probe connection ports. Callout 1 points to a thermocouple probe type K connection (T1 and T2). Callout 2 points to a connection for probes with a TUC connector (A and B).

|   |                                                  |   |                                                    |
|---|--------------------------------------------------|---|----------------------------------------------------|
| 1 | Thermocouple probe type K connection (T1 and T2) | 2 | Connection for probes with TUC connector (A and B) |
|---|--------------------------------------------------|---|----------------------------------------------------|

## 7 Commissioning

### 7.1 Mains unit/energy storage unit

The measuring instrument is supplied with an energy storage unit.



Fully charge the energy storage unit before using the measuring instrument.



Plug the mains unit USB cable into the USB port on the side.



If the mains unit is connected, the measuring instrument is automatically powered via the mains unit.



Only charge the energy storage unit at an ambient temperature of 0 to 45 °C.

### 7.2 Switching the testo 400 on and off

| Current status                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Action                                   | Function                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|----------------------------------------------------------------------------------------------------------|
| Instrument off                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Press and hold down the button (> 3 sec) | Instrument is switched on                                                                                |
| When the measuring instrument is started for the first time, the setup wizard guides you through the following setting parameters step by step: <ul style="list-style-type: none"> <li>- <b>Language</b></li> <li>- <b>Country</b></li> <li>- <b>Units</b></li> <li>- <b>WLAN</b></li> <li>- <b>Date and time</b></li> <li>- <b>Own company address</b></li> <li>- <b>E-mail account</b></li> </ul> After the setup wizard, a tutorial can be launched. The tutorial demonstrates the general operation and the most important functions of the measuring instrument using examples. |                                          |                                                                                                          |
| Instrument on                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Press the button briefly (< 1 sec)       | Instrument is switched to standby mode. The instrument is re-activated when the button is pressed again. |

| Current status | Action                                   | Function                                                                                                                |
|----------------|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Instrument on  | Press and hold down the button (> 1 sec) | Choice: press <b>[OK]</b> to switch the instrument off or press <b>[Cancel]</b> to cancel switch-off of the instrument. |




The tutorial can be executed again at any time in the main menu under **Help and Information**.



Measuring values that have not been saved are lost when the measuring instrument is switched off.

### 7.3 Display – user interface

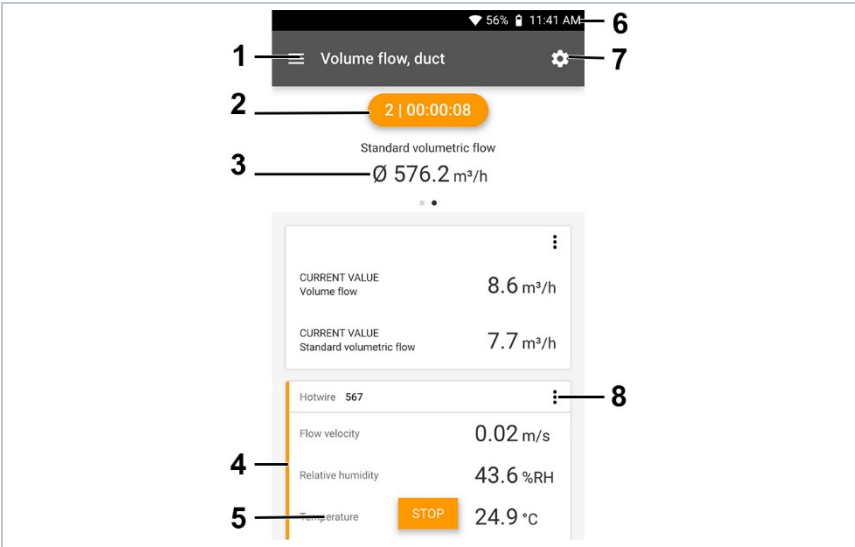

|   |  |                                                |
|---|--|------------------------------------------------|
| 1 |  | Open main menu                                 |
| 2 |  | Display of the measurement period              |
| 3 |  | Display of calculated measurement results      |
| 4 |  | Reading for each probe                         |
| 5 |  | Can be controlled with different function keys |
| 6 |  | Instrument status bar                          |
| 7 |  | Configuration                                  |


|   |                                                                                   |                      |
|---|-----------------------------------------------------------------------------------|----------------------|
| 8 |  | Edit reading display |
|---|-----------------------------------------------------------------------------------|----------------------|

Further symbols on the user interface (without numbering)

|                                                                                   |                     |
|-----------------------------------------------------------------------------------|---------------------|
|  | One level back      |
|  | Exit view           |
|  | Share report        |
|  | Search              |
|  | Favourite           |
|  | Delete              |
|  | Further information |
|  | Display report      |
|  | Multiple selection  |

# 8 Using the product


## 8.1 Overview of main menu (☰)

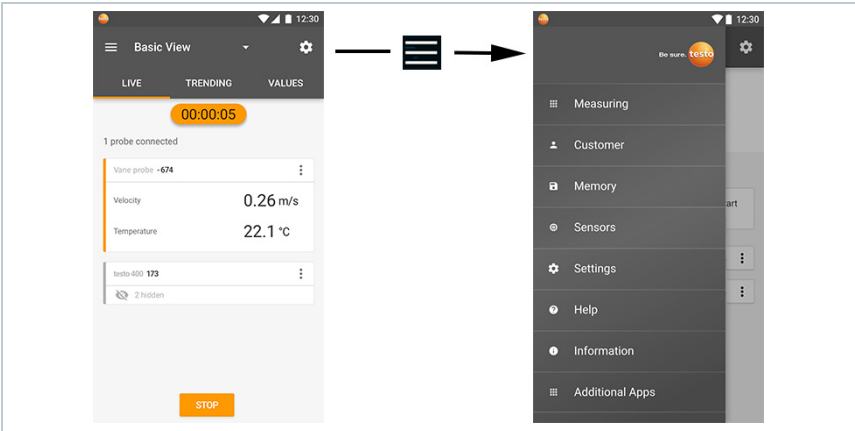

| Menu      | Description                                                                                                                                                                                                                                                                |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measuring | List with various application-specific menus                                                                                                                                                                                                                               |
| Customer  | Create, edit and delete customer and system information.                                                                                                                                                                                                                   |
| Memory    | Call up, edit, send, export (different formats possible) and delete measurements that have been carried out.                                                                                                                                                               |
| Sensors   | Overview of integrated sensors and connected probes. <ul style="list-style-type: none"><li>- Adjustment via the input of calibration information</li><li>- Damping</li><li>- Serial number</li><li>- Firmware version</li><li>- Battery level (Bluetooth® probe)</li></ul> |

| Menu                           | Description                                                                                                                                                                                                                                                                                                       |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Settings</b>                | Instrument settings <ul style="list-style-type: none"><li>- <b>Regional settings</b></li><li>- <b>WLAN &amp; e-mail</b></li><li>- <b>Measurement settings</b></li><li>- <b>Company details</b></li><li>- <b>Torch</b></li><li>- <b>Display settings</b></li><li>- <b>Restore factory settings</b></li></ul>       |
| <b>Help and Information</b>    | Aids <ul style="list-style-type: none"><li>- <b>Instrument information</b> (serial number, app version, firmware version, update information)</li><li>- <b>Tutorial</b></li><li>- <b>Instruction manual</b></li><li>- <b>Exclusion of liability</b></li></ul>                                                     |
| <b>Additional applications</b> | Additional applications <ul style="list-style-type: none"><li>- <b>Camera</b></li><li>- <b>Clock</b></li><li>- <b>E-mail</b></li><li>- <b>Gallery</b></li><li>- <b>Browser</b></li><li>- <b>Calendar</b></li><li>- <b>Pocket calculator</b></li><li>- <b>QuickSupport</b></li><li>- <b>File manager</b></li></ul> |

## 8.2 Overview of measurement types

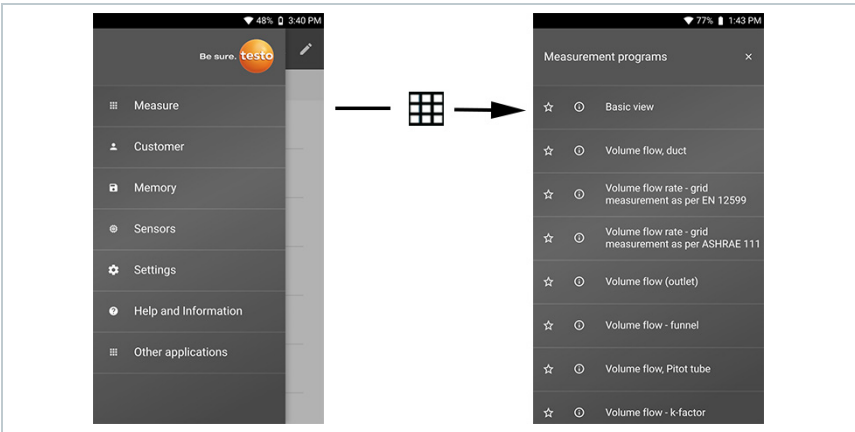


| Measuring                                |
|------------------------------------------|
| Basic view                               |
| Volume flow - Duct                       |
| Volume flow – Duct traverse (EN 12599)   |
| Volume flow – Duct traverse (ASHRAE 111) |
| Volume flow - Outlet                     |
| Volume flow - funnel                     |
| Volume flow – Pitot tube                 |
| Volume flow – k-factor                   |
| Comfort – PMV/PPD (EN 7730 / ASHRAE 55)  |
| Discomfort – Draft rate                  |
| Differential temperature ( $\Delta T$ )  |
| Differential pressure ( $\Delta P$ )     |



You will also find further information about the individual measurement types in the online instruction manual on the Testo website, [www.testo.com](http://www.testo.com), under the product-specific download.

## 8.3 Overview – editing the reading display (⋮)

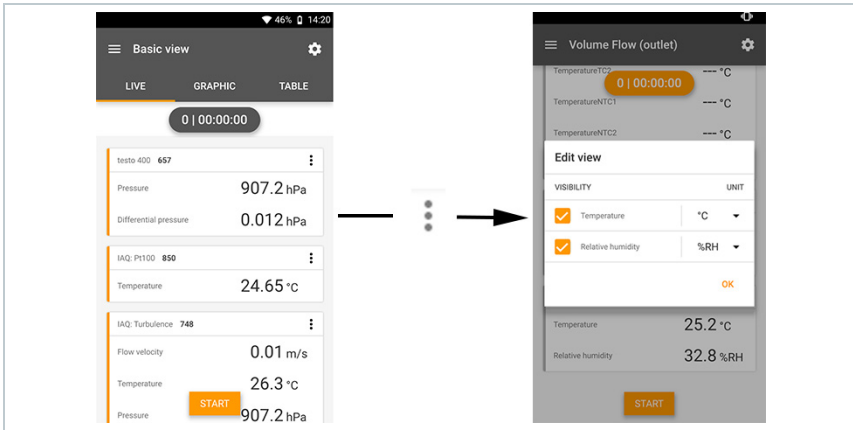

| Menu                                | Description                                                                                                                                                                                                                |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Edit view</b>                    | The display can be edited for each connected probe. The available measurement parameters can be selected and deselected and the unit for each parameter can be adjusted. These changes are saved for the next measurement. |
| <b>Zero pressure sensor</b>         | Once the testo 400 has been brought into the operating position for a differential pressure measurement, the sensor should be zeroed against ambient air.                                                                  |
| <b>Adjusting Degree of Emission</b> | If the testo 805i is connected, the selection of emissivity appears here. This can be set individually depending on the measuring surface.                                                                                 |

## 8.4 Getting the readings in 5 steps

- 1 Switch instrument on: Press button > 1 sec.



- 2 Connect probe via cable or Bluetooth®.



- 3** Place probe in the application.



- 4 Start measurement and read off measuring values.



### 5 Save and send readings



You will also find further information about your testo 400 universal IAQ instrument in the online instruction manual on the Testo website, [www.testo.com](http://www.testo.com), under the product-specific download.

---

## 9 Software

The testo 400 has a USB port, via which the measuring instrument can be connected to the PC.



Knowledge of Windows® operating systems is required to work with the software.

---

### 9.1 Purpose

The testo DataControl measurement data management and analysis software enhances the functionality of the testo 400 measuring instrument with lots of useful functions:

- Manage and archive customer data and measuring site information
- Read out, evaluate and archive measurement data
- Presenting readings in graphic form
- Create professional measurement reports from the existing measurement data
- Conveniently add images and comments to measurement reports
- Data import from and data export to the measuring instrument

### 9.2 System requirements



Administrator rights are required for installation.

---

#### Operating system

The software can be run on the following operating systems:

- Windows® 7
- Windows® 8
- Windows® 10

#### Computer

The computer must meet the requirements of the operating system in each case. The following requirements must also be met:

- Interface USB 2 or higher
- DualCore processor with minimum 1 GHz
- Minimum 2 GB RAM
- Minimum 5 GB available hard disk space
- Screen with a resolution of at least 800 x 600 pixels

## 9.3 First steps

### 9.3.1 Installing the software/driver

- 1 | Insert the program CD into the CD-ROM drive of the computer.  
or  
Download the program ([www.testo.com/download-center](http://www.testo.com/download-center)) and unpack the zip file using a suitable compression tool.
- 2 | Launch the **TestoDataControlPCsetup.exe** file.
- 3 | Follow the instructions of the installation wizard.
- 4 | Click on **[Finish]** to complete the software installation.
- 5 | Once the software installation is completed, connect the instrument to the computer to continue with the driver installation.
- 6 | Use the USB-cable to connect the instrument to the PC.
- ▶ | The connection will be established.

### 9.3.2 Launching testo DataControl



The user interface of the software is opened in the language of the operating system, if it is supported. If the operating system language is not supported, the user interface will be in English.

---

#### Windows® program menu

Windows® 7:

Click on **[Start]** | **All Programs** | **Testo** | **testo DataControl** (double-click on left mouse button).

Windows® 8:

Click on **[Start]** | right mouse button | Search (Enter the application name in the search field) | **testo DataControl** (double-click on left mouse button).

Windows® 10:

Click on **[Start]** | **All Apps** | **Testo** | **testo DataControl** (double-click on left mouse button).

testo DataControl launches automatically.

# 9.4 Using the product

## 9.4.1 Overview

|   |                     |   |                                               |
|---|---------------------|---|-----------------------------------------------|
| 1 | Main menu           | 3 | Connection status of the measuring instrument |
| 2 | Update notification | 4 | Multi-function bar                            |
| 5 | Display area        |   |                                               |

Operation of the software is based on the same functional principle as the instrument firmware for the testo 400.



You will also find further information about testo DataControl in the online instruction manual on the Testo website, [www.testo.com](http://www.testo.com), under the product-specific download.

## 9.4.2 Synchronizing data

|   |                        |   |              |
|---|------------------------|---|--------------|
| 1 | Synchronization status | 2 | Display area |
|---|------------------------|---|--------------|

The data can be synchronized selectively per customer or as a whole across all customers simultaneously.

# 10 Technical data

## General

| Feature                   | Value                                                                                                                                                                                                                                                                                                               |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Probe connections         | <ul style="list-style-type: none"> <li>- 2x type K thermocouple</li> <li>- 2x Testo Universal Connector (TUC) for connecting cable probes to the corresponding plug</li> <li>- 1x differential pressure</li> <li>- 1x absolute pressure (integrated)</li> <li>- 4x Bluetooth® probe or testo Smart Probe</li> </ul> |
| Interfaces                | <ul style="list-style-type: none"> <li>- Micro USB for connection to PC or for battery charging with mains unit</li> <li>- WLAN 802.11 b/g/n</li> <li>- Bluetooth® 4.0</li> </ul>                                                                                                                                   |
| Internal memory capacity  | 2 GB (corresponds to 1,000,000 readings)                                                                                                                                                                                                                                                                            |
| Rechargeable battery life | approx. 10 hours of continuous operation / 3200 mAh                                                                                                                                                                                                                                                                 |
| Measuring cycle           | 0.5 sec / display update 1 sec                                                                                                                                                                                                                                                                                      |
| Operating temperature     | -5 to +45 °C                                                                                                                                                                                                                                                                                                        |
| Storage temperature       | -20 to +60 °C                                                                                                                                                                                                                                                                                                       |
| Charging temperature      | 0 to +45 °C                                                                                                                                                                                                                                                                                                         |
| Dimensions in mm          | 186 x 89 x 41 (L x W x H)                                                                                                                                                                                                                                                                                           |
| Housing material          | PC, ABS, TPE                                                                                                                                                                                                                                                                                                        |
| Weight                    | 500 g                                                                                                                                                                                                                                                                                                               |
| Protection class          | IP 40 (with probe connected)                                                                                                                                                                                                                                                                                        |
| Display                   | 5.0 inch HD display (1280*720 pixels)                                                                                                                                                                                                                                                                               |
| Camera                    | <ul style="list-style-type: none"> <li>- Front camera 5.0 MP</li> <li>- Rear camera 8.0 MP</li> </ul>                                                                                                                                                                                                               |

## Integrated sensors (at 22 °C, ±1 digit)

| Characteristics                      | Measuring range  | Accuracy                                                                | Resolution |
|--------------------------------------|------------------|-------------------------------------------------------------------------|------------|
| Temperature (TC type K) <sup>1</sup> | -200 to +1370 °C | ±(0.3 °C + 0.1% of m.v.)<br>Internal cold junction measurement: ±0.5 °C | 0.1 °C     |

| Characteristics                    | Measuring range   | Accuracy                                                                                                                               | Resolution |
|------------------------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------|------------|
| Temperature (NTC)                  | -40 to +150 °C    | $\pm 0.2$ °C (-25.0 to +74.9 °C)<br>$\pm 0.4$ °C (-40.0 to -25.1 °C)<br>$\pm 0.4$ °C (+75.0 to +99.9 °C)<br>$\pm 0.5\%$ of m.v. (rest) | 0.1 °C     |
| Differential pressure <sup>2</sup> | -100 to +200 hPa  | $\pm (0.3 \text{ Pa} + 1\% \text{ of m.v.})$ (0 to 25 hPa)<br>$\pm (0.1 \text{ hPa} + 1.5\% \text{ of m.v.})$ (25.001 to 200 hPa)      | 0.001 hPa  |
| Absolute pressure                  | +700 to +1100 hPa | $\pm 3 \text{ hPa}$                                                                                                                    | 0.1 hPa    |

<sup>1</sup> The accuracy information applies in an adjusted, stable temperature state. Plugging in the mains unit, charging the battery or adding digital probes can distort this temporarily, and additional errors may occur.

<sup>2</sup> The accuracy specification applies immediately after zeroing of the sensor. For long-term measurements, mains operation with fully-charged battery is recommended.

## 10.1 Product-specific approvals

Please find the current approvals in the attached **Approval and Certification** document(s).

## 10.2 Contact and support

If you have any questions or need further information, please contact your dealer or Testo Customer Service. For contact details, please visit [www.testo.com/service-contact](http://www.testo.com/service-contact).





**Testo SE & Co. KGaA**  
Testo-Strasse 1  
D-79853 Lenzkirch  
Germany  
Phone: +49 7653 681-0  
Fax: +49 7653 681-7699  
E-mail: [info@testo.de](mailto:info@testo.de)  
[www.testo.com](http://www.testo.com)

0971 4011 en 03